

# PORTABLE PICTURES SET UP

To set up Portable Pictures kit please follow these instructions. If you are unsure of anything please call us on 07968 109 985 or 07984 149 416 for advise.

NB: This is for a standard package using the following kit:

Luxberg 80" or 100" Pull up Screen  
Camp Chef 120" or 132" Screen  
Epson TW-3200 HD Projector  
Panasonic DMP-BD30 Blu-ray/ DVD player  
Marantz PM6005 Amp  
Wharfdale 506 Speakers  
Yamaha DBR12 Speakers

To set up the 80" or 100" Luxberg pull up screen:

- Place the screen in position for viewing.
- Swivel the legs 90 degrees
- Unhook clasps and pull screen all the way up.

To set up the 120" or 132" Camp Chef screens:

- Following the diagram on the inside of the bag assemble all the poles (except the two foot poles) to make the frame lying on it's back.
- If screening outdoors attach 2 guy ropes to each of the top corners of the frame.
- Take the canvas screen out of it's bag and stretch over the frame. The OEG logo should be at the bottom of the screen. Attach all the screen hooks to the frame.
- With the screen still on it's back attach the two foot poles.
- Lift the screen up onto it's feet. This should be done by two people.
- If screening outdoors peg in the foot poles and the guy ropes to secure the screen against the wind.

To set up the Projector, Blu-Ray/ DVD player, Amp and Wharfdale 506 Speakers:

- Place the speakers either side of the screen.
- Place the flight case 4-5 metres in front of the screen and lock the wheels.
- Remove the flight case doors.
- Plug the Projector, Amp and Blu-Ray/ DVD Player into a mains supply.
- Plug one end of the HDMI cable into the back of the projector (HDMI 1) and the other end into the back of the Blu-Ray/ DVD player.
- Plug one end of the phono cable into the back of the Blu-Ray/ DVD player (Audio Out/ L R) and the other end into the back of the Amp (Audio In/ Network).
- Plug the speakers into the Amp using the XLR leads.

- Turn the Projector's main power switch on (located on the back, next to the mains lead).
- Press the power button on the top of the Projector.
- Adjust the picture to fill the screen using the inner lens ring to zoom the picture in and out and the left/right and up/down dials to move the picture.
- Focus the image using the outer lens ring.
- Turn on the Amp and make sure the input (LH dial) is set to Network and Speaker A is selected (and that speaker B is deselected).
- Turn on the Blu-Ray/ DVD player and play your film.
- Adjust the volume on the amp (RH dial).

To set up the Yamaha DBR 12 Speakers:

- If you are using the Yamaha DBR 12 Speakers you don't need an amp as they are self powered.
- Put the speaker stands up either side of the screen and lift the speakers up onto the stands so the pole goes into the hole on the bottom of each speaker.
- Plug the speakers into a mains supply.
- Plug one end of the phono cable into the back of the Blu-Ray/ DVD player (Audio Out/ L R) and the other end into the back of one of the speakers (Input/ Line 2). I will call this SPEAKER 1.
- Connect the 2 speakers together using the XLR lead, from the output of SPEAKER 1 to input line 1 or 2 of SPEAKER 2.
- Make sure the CH1+2 MIX button is pressed on the output panel of SPEAKER 1.
- Turn on both speakers.
- The master volume is controlled from the SPEAKER 1 input.

WWW.PORTABLEPICTURES.CO.UK / INFO@PORTABLEPICTURES.CO.UK / 07984 149416 OR 07968 109985