

# PORTABLE PICTURES CINE-CAMPER



Thank you for hiring the Cine-Camper from Portable Pictures.

We hope you enjoy your trip. If you have any questions about anything please don't hesitate to call us on 07968 109985 (Andy) or 07984 149416 (Clare).

The Cine-Camper is an extremely reliable Toyota Hiace but as with all vehicles you need to be prepared in case anything does go wrong. In the event of a breakdown please call the number below and quote the ALPS Road Rescue policy details and vehicle registration L373 YCV. Please also call us to keep us informed.

**BREAKDOWN PHONE NUMBER: 0345 600 5801**

ALPS Road Rescue Policy Number: CBB1000048

Policy Holder: Clare Tinsley

**PLEASE FILL UP THE TANK WITH DIESEL ONLY**

Here is a handy little guide that tells you how to operate the following features:

- Bench Seat
- Beds
- Sink, Hob & Fridge
- Awning
- Table
- Electrics & Leisure Battery
- Mobile Cinema Kit
- Toilet
- Bike Rack

## Bench Seat

The bench seat in the back of the van can face either forwards or backwards. To change the direction that it faces you need to slide it back by pulling the handle at the bottom rear side and then pull the seat up from the middle with both hands to flip it round.

## Beds

The Cine-Camper sleeps 4 people; 2 in the roof and 2 down below.

To make the bed in the roof do the following:

1. Unhook the netting mesh across the roof area.
2. Remove all bedding etc. from the roof area above the cab.
3. Move the two wooden flooring sections into position.
4. Put the mattress cushions into place lining up the velcro tabs.

To make the bed down below do the following:

1. Remove the metal arm rests from the 2 rear seats and the bench seat.
2. Take out the 2 metal poles from inside the bench seat.
3. Set the bench seat so it is facing forwards.
4. Attach the metal poles between the 2 rear seats and the bench seat. There are holes they slot into. You will need to push the bench seat forward using the handle at the bottom of the rear side, set the poles in place and then pull the bench seat back to secure the poles. (see pic below).



5. Push the back of the bench seat forwards slightly to release the holding mechanism and then gently lower the back of the seat until it is flat.
6. Remove the backs of the 2 rear seats and slot these in to the gap between the back seats.

## Sink, Hob & Fridge

The water for the sink is drawn from a plastic container in the cupboard underneath the hob. Remove the container and fill it up with water when it runs out.

To operate the hob you first need to turn on the gas.

The gas controls are located in the cupboard under the hob. To turn the gas on you need to turn the switch on top of the gas cannister anti-clockwise so it is pointing up and the middle red knob (with the pan sticker) on the left hand side clockwise so it is horizontal. Turn the bottom red knob (with the snowflake sticker) clockwise to turn the gas on for the fridge.

Here is a photo showing the gas controls in the ON position:



Once the gas is on you can turn on the hob by pressing in and turning the hob controls whilst pressing the ignition button in the centre.

The fridge can be either run off the gas, the leisure battery or via electric hookup.

If you are camping without electric hookup it is best to run it off the gas to avoid draining the battery. You can run it off the battery as you are driving if you like as the leisure battery charges itself using power from the main battery when the engine is turned on.

Set the fridge switch to ON, the dial to 8 and press the green button on the top right hand side of the fridge to run it off electric hookup (see pic below) or the red button to run it off the leisure battery.



To run the fridge off the gas ensure the gas is turned on (as per the above instructions), turn the left hand dial up to 8 and then ignite the gas by turning on the red button on the top left hand side and pushing in and turning the second dial anti-clockwise (see pic below).



You will hear a clicking of the ignition spark that will stop once the gas is lit. Once it is lit you can turn off the red ignition button.

You can check whether the gas is lit by opening the fridge and looking through the small window at the back on the bottom left side. If the gas is lit you can see the pilot light through here.

To open the fridge door you need to remove the pin below the left hand side controls. Please put the pin back in once you have closed the door.

## Awning

The Cine-Camper has a fitted side awning on the left hand side of the vehicle.

To set up the awning do the following:

1. Locate the awning handle from inside the bench seat.
2. Undo the straps at each end of the awning.
3. Hook the end of the handle into the loop on the RHS of the awning.
4. To release the awning press the button located in the centre of it's underside.
5. Turn the handle anti-clockwise until the awning is fully extended.
6. Pull out the legs from either side of the awning and extend them until they reach the ground.
7. Peg down the legs with the tent pegs located under the bench seat.

Be careful when using the awning in windy conditions. It is best to put the awning away overnight in case the wind gets up and causes it to flap.

## Table

The table is stored at the back of the van behind the tall cupboard on the left hand side.

To put the table up do the following:

1. Set the bench seat so it is facing backwards.
2. Unfold the table leg.
3. Hook the table onto the metal bar under the window on the right hand side of the van.
4. Secure the plastic fasteners underneath the table as per the pic below.



## Electrics & Leisure Battery

The plug socket for using electric hookup is located on the outside of the van on the right hand side. There is a 16A male to female extension lead and a 16A to 13A mains socket adapter located under the bench seat.

If you are not getting any power check that the fuse hasn't tripped. The trip switch is located at the back of the van on the back of the tall cupboard (behind where the table is stored). The switch should be up in the ON position.

The interior lights in the van run off the leisure battery. The leisure battery is charged up by the main battery when the van's engine is turned on.

## Mobile Cinema Kit

The Cine-Camper comes equipped with it's very own mini mobile cinema.

There is a pull down screen that attaches to the roof. This is stored with the table at the back of the van. The rest of the cinema kit can be found in a camera bag under the bench seat. The kit consists of a Aaxa P3 Pico pocket projector and charger, a Minirig portable speaker, a USB stick and tripod.


Films can be screened from a laptop or a USB stick. You can either plug in your own laptop/ USB stick or watch one of the films we have provided on the USB stick inside the camera bag. Please note that to watch films from USB they need to be MP4 format.

To set up the mini cinema and play a film from USB inside the van do the following:

1. Locate and unroll the mini cinema screen. Attach the screen in position (as per the pic on the next page) by lining up the magnets.
2. Plug the Minirig speaker into the headphone socket on the back of the Aaxa P3 Pico pocket projector using the mini jack cable in the speaker bag.
3. Insert a USB stick into the USB port of the projector.
4. Attach the projector to the velcro strips located on the roof of the cab (as per the pic below).
5. Press and hold the power button on the projectors keypad for 2-3 seconds to turn the projector on.
6. From the menu screen select the top left VIDEO icon followed by the USB stick icon and then navigate to the film you would like to watch.
7. When the film starts playing press the UP button on the projectors keypad to bring up the volume control and use UP and DOWN to adjust the volume.
8. Press and hold the power button on the projectors keypad for 2-3 seconds to turn the projector off.



If you want to play a film from a laptop you will need to connect the laptop to the projector with the HDMI cable provided, plug the minirig speaker into the headphone socket of your laptop and select the bottom right INPUT icon, followed by the HDMI icon.

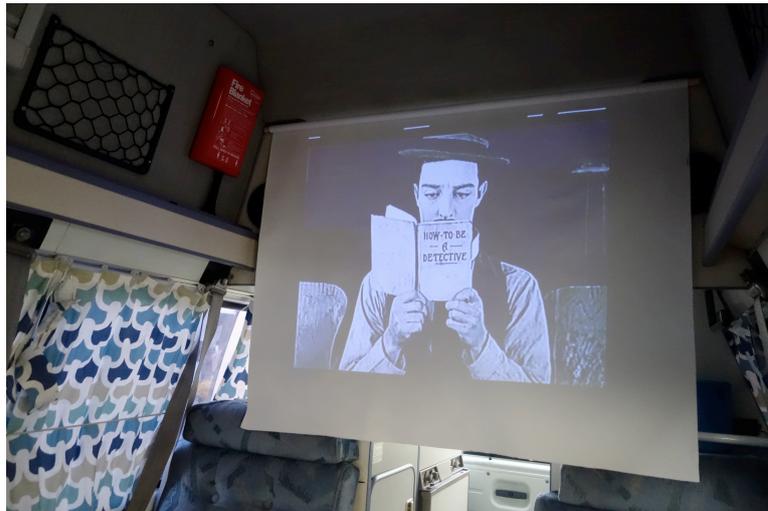

If you would rather watch a film outside you can connect the mini cinema screen to the outside of the van by just attaching it anywhere with the magnets. You will then need to use the tripod and put the projector on a table a suitable distance from the screen. You will also need to change the Projection Direction setting from Front/ Inverted to Front/ Vertical. This can be found by selecting the top right SETTINGS icon from the menu.

If you wanted a bigger screen there is a white sheet provided in the bench seat that you could rig up using the washing line and pegs found in the cupboard in the footwell in the back of the van.

## Toilet

If you have booked the portable toilet as an additional extra it will be stored in the bottom cupboard at the back of the van opposite the sink along with chemicals for the waste tank and flush.

To prepare the toilet for use you will need to do the following:

1. Remove the top half of the toilet by pressing the white lever on the back to the left and lifting it forwards.
2. Unscrew the cap on the top section and add water and Aqua Rinse Plus (from the pink bottle) for the flush. Dose 100ml per 15L of water.
3. Twist the grey pipe on the bottom section to the side, unscrew the cap and add water and Aqua Kem Blue (from the blue bottle) to the waste holding tank. Dose 120ml per 20L of water.
4. Put the two sections back together.

When using the toilet you can pull the handle on the front to release waste into the holding tank and operate the flush by pumping the round lever on the top left.

**Please empty and clean the toilet before you return the van.**

To empty the toilet remove the top section, twist the grey pipe to the side, remove the cap and pour the contents into a designated chemical toilet disposal point whilst pressing the white button.

## Bike Rack

If you have booked the bike rack as an additional extra it will be attached to the back of the van. The rack fits 3 bikes. Feel free to remove the rack when you are not using it.

To attach the bike rack to the van do the following:

1. Release the 2 clamps on either side of the rack by pulling up the black clamping handles.
2. Unfold the rack and adjust the carrier frame to fit the van. The larger padded bar should be at the bottom and the bike support arm horizontal.
3. Line up the teeth of the clamps and push down the 2 black clamping handles to lock them in position.
4. Attach the green straps to the top of the boot, the red straps to the side of the boot and the yellow straps to the bottom of the boot as per the pic below.
5. Load your bikes onto the rack. Position the crossbar of each bike into a pair of cradles on the support arm and secure by clipping the rubber straps onto the cradle.
6. Tighten all the straps and ensure that the hooks are all secure.



## CONTENTS LIST

Please ensure the van is returned with the following items:

- 16A Extension Cable
- 16A to 13A Mains Socket Adapter
- AM/FM Radio/ CD Player
- Warning Triangle & Hi-Vis Vests
- Basic Toolkit
- Battery Charger
- Mobile Cinema Kit
- 2 Camping Chairs
- 2 Camping Stools
- Aluminium Camping Table
- Kettle
- 4 Large Plates
- 4 Small Plates
- 4 Bowls
- 4 Mugs
- 2 Wine Glasses
- 2 Tumblers
- 4 Piece Cutlery Set
- Sharp Knife
- Bread Knife
- BBQ Tools

- Spatula
- Serving Spoon
- Wooden Spoon
- Saucepan
- Frying Pan
- Chopping Board
- Cheese Grater
- Bottle Opener
- Tin Opener
- Salad Bowl
- Small Cafetiere
- First Aid Kit
- Tea Towel
- Dustpan & Brush

**THE CINE-CAMPER IS STRICTLY A NON SMOKING VEHICLE**  
**PLEASE FILL UP THE TANK WITH DIESEL ONLY**

Follow Portable Pictures on social media and feel free to tag us in any photos you take of the Cine-Camper.

Facebook: @portablepicturesbristol

Instagram: @portablepictures

Twitter: @portablepicture

WWW.PORTABLEPICTURES.CO.UK / INFO@PORTABLEPICTURES.CO.UK / 07968 109985 OR 07984 149416

Please write your comments and suggestions here..